
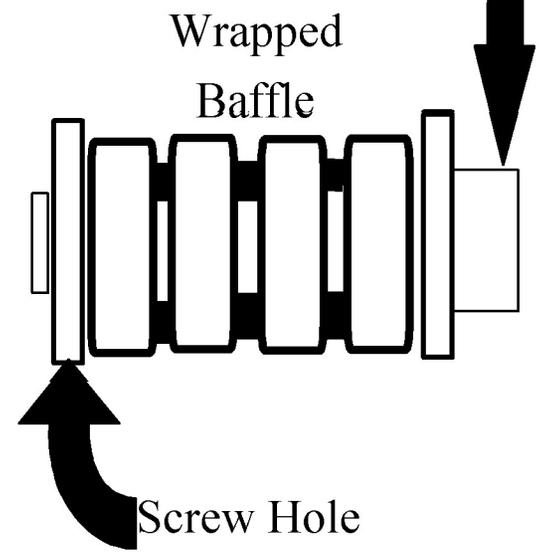


1. Remove screw and spry WD 40 in both the inlet and exit end of the muffler. This is to help release the baffle from the muffler housing and will not damage the baffle or the muffler housing so use a lot and go around the outside of the baffle.
2. Slam muffler down into the wood and watch to see that the baffle starts to move and fall out. It is easy to see movement by watching the bolt hole. **(Be careful not to damage the muffler housing as this WILL NOT BE Covered under warranty).**
3. Set muffler on piece of wood and using another piece of wood and hammer drive the baffle into the muffler housing. Insure that the screw holes line up while installing the baffle. That well tell you when the baffle is installed all the way.

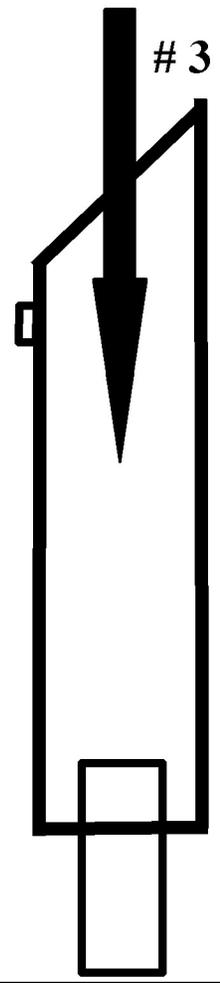

Use Clean piece of pine or semisoft wood, no knots or nails

Use Clean piece of pine or semisoft wood, no knots or nails